

## BACKGROUND MUSIC: BGM

How do I turn background music On or OFF?

Display Phones: Some display phones show BGM on the bottom line of the display, press the softkey below BGM to turn on or off.

If you do not have a Music On Hold device connected to your telephone system and you inadvertently turn BGM on, you may hear white noise or hiss through your speaker during quiet times. Simply turn off the BGM as indicated below.

<b>System</b>	<b>Turn Feature ON</b>	<b>Turn Feature OFF</b>
KX-TDE, KX-TDA, KX-TAW, KX-NCP	INTERCOM, STAR, 7511	INTERCOM, STAR, 7510
KX-TD KX-TA 1232	Press 1 with handset down and speakerphone off, toggles on or off	
KX-TA 308/624/824	Press 1 with handset down and speakerphone off, toggles on or off	
KX-T 306/616/1232	Press 1 with handset down and speakerphone off, toggles on or off	