

Programming Speed Dial Buttons

If you have unused buttons on your digital or analog proprietary telephone, you can program them as speed dial buttons.

KX-TDA, KX-TDE, KX-NCP, KX-TAW Speed Dial Button

1. With the handset down and the speakerphone off.
2. Press the PROGRAM button (PAUSE if you do not have a PROGRAM button)
3. Press the button you want to program
4. If the button light turns red, dial 2 (if you select a button without a light, skip this step)
5. Dial 9 or a [line access number](#)
6. Dial the number you want to program
7. Press the STORE button. (The button with AUTO DIAL above it and STORE below it)
8. Press the PROGRAM button (PAUSE if you do not have a PROGRAM button)

KX-TD & KX-TA1232 SPEED DIAL BUTTON

KX-TD308 KX-TD816 KX-TD1232 KX-TD500 KX-TA1232

1. With the handset down and the speakerphone off.
2. Press the PROGRAM button, press 99 (PAUSE 99 if you do not have a PROGRAM button)
3. Press the button you want to program
4. If the button light turns red, dial 2 (if you select a button without a light, skip this step)
5. Dial 9 or a [line access number](#)
6. Dial the number you want to program
7. Press the STORE button. (The button with AUTO DIAL above it and STORE below it)
8. Press the PROGRAM button (PAUSE if you do not have a PROGRAM button)

KX-TA and KX-T SPEED DIAL BUTTON

KX-TA308 KX-TA 624 KX-TA824 KX-T308 KX-T616 KX-T1232

1. With the handset down and the speakerphone off.
2. Move the memory switch on the end of the phone to PROGRAM or if you have a phone with a PROGRAM key, press PROGRAM.
3. Press the button you want to program
4. If the button light turns red, dial 2 (if you select a button without a light, skip this step)
5. Dial 9 or a line access number
6. Dial the number you want to program
7. Press the STORE button. (The button with AUTO DIAL above it and STORE below it)
8. Press the PROGRAM button or move the switch back to its original position